


## Wet Room Walk In Shower Tray & Drain - OFFSET DRAIN - 1200 x 1000mm

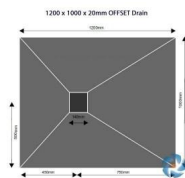

Rating: Not Rated Yet

### Price

Base price with tax £210.00

Sales price £210.00

Discount

Tax amount £35.00

[Ask a question about this product](#)

Manufacturer [Wetrooms Online](#)

Description

### SPECIFICATION

- 1200 x 1000 x 20mm

- **OFFSET DRAIN**
- **UNDER-SUPPORT REQUIRED**
- **COMPLETE WITH DRAIN**
- **TRIMABLE BY 50MM OFF EACH EDGE**
- **20 YEAR GUARANTEE**

## **SUITABLE FOR**

- **WOOD OR CONCRETE SUBFLOOR**
- **TILED FLOOR FINISH**
- **WET ROOMS**
- **LEVEL ACCESS**
- **RAISED ON PLATFORM**
- **UNDERFLOOR HEATING**

## **NOT SUITABLE FOR**

- **VINYL FLOOR FINISH**
- **MICRO-CEMENT**
- **USE WITH WHEELCHAIRS**
- **FITTING DIRECT ON JOISTS**

A wet room walk in shower tray with 2% fall to drain complete with fast flow drain.

- [At A Glance](#)
- [Description](#)
- [Instructions](#)
- [Contents](#)

## **At A Glance**

- 1200 x 1000 x 20mm
- **OFFSET** Drain Position
- Pre-made 2% fall to drain
- Lightweight & Strong
- Under-boarding of WetBase required to provide support
- Complete with Dallmer fast flow drain
- Fully trimable by up to 50mm off each edge (equal amounts must be trimmed from each side)
- Ideal for creating flush 'walk in' showering areas (rest of floor will require boarding by 10mm)
- Easy & quick to install: [WetBase installation instructions](#)
- Designed and manufactured in the EU
- 20 years guarantee if fitted in accordance with manufacturer's instructions.
- **FREE next working day delivery** if ordered by 3pm ([Terms & Conditions apply](#) )
- Money back guarantee if not 100% happy ([Terms & Conditions apply](#) )
- Price match guarantee ([Full Details](#) )

## Description

Our WetBase is engineered in Germany and manufactured in the EU. **It is not a cheap far eastern import.** The drain is the leading fast flow drain from Dallmer.

WetBase Shower Trays have been designed for wet rooms and walk in showers, providing a tileable shower base, avoiding the need for the traditional 'step-in' white acrylic tray.

WetBase Standard wetroom bases allow for total flexibility and give the installer the option of building their own wetroom system. It is a lightweight flush floor panel with pre-made falls to drain, and is coated with a cementitious layer ready to receive a tiled surface.

If you have a concrete floor or if there is no access under the flooring to locate the shower drain, then the tray can still be used by using a separate raised substrate. For full fitting instructions please see: [Fitting the WetBase Wet Room Tray](#)

## Offset Drain Position

The offset drain position allows for the easier avoidance of flooring joists.

## Instructions

The followings are the instructions for installing the Wetrooms Online WetBase (standard) on a wooden floor. These instructions and others for concrete floors and the Linear WetBase can be printed and / or downloaded in PDF format here:

[Standard WetBase Installation \(Wooden Floor\)](#)

[Standard WetBase Installation \(Concrete Floor\)](#)

[Linear WetBase Installation \(Wooden Floor\)](#)

Wetrooms online WETBASE low profile shower trays are designed to create a flat walk in shower area without raised steps or platforms. This tray is designed to be inset into or on top of **WOODEN** floors and then tiled over. The Coated shower tray is pre machined with the correct falls in all directions to the drain which is partly attached to the tray.

It requires additional support which is achieved by fitting plywood panels between the joists.

Conventional floor boards are approx 20mm thick so laying the tray on top of the joists would bring the top of the tray level with the floor boards.

**WE DO NOT** recommend tiling straight on to floor boards. We recommend that the entire wooden floor is covered in a 10mm thermal tile backer board prior to tiling and therefore you may need to insert a 10mm packer under the wetbase tray to achieve an even level floor area throughout. The tile backer board is a good insulator and the perfect material on which to tile.

If required the tray can be installed on a raised platform.

Animated installation videos can be viewed here: [WetBase Installation Videos](#)

## Contents

1 x 1200 x 1000 under tray 20mm deep 2% fall.  
1 x Drain with stainless steel grid (horizontal)  
Fitting Instructions